
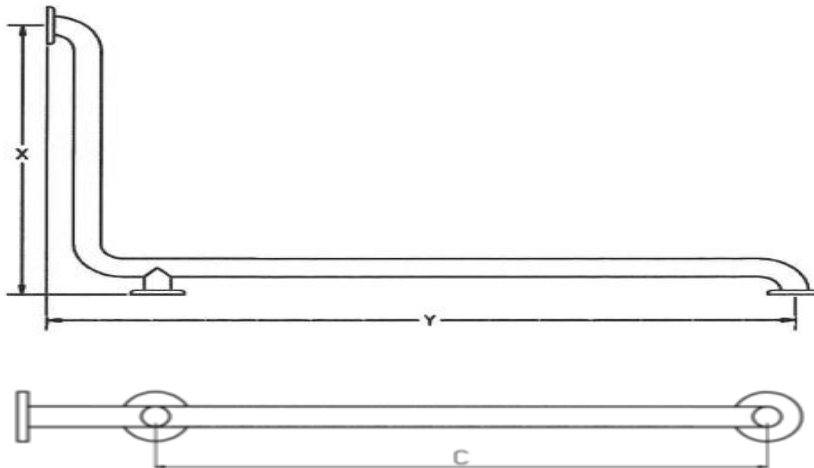


Horizontal Angled Grab Bar

- Material: 304 stainless steel
- Available Finishes: Oil rubbed bronze (OB)
Satin Stainless (SA)
Satin Peened (PN)
Polished Chrome (PO)
Matte Black (MB)
- Dimensions:
 - Length (flange center to center): table below
 - Tube outside diameter: 1.25"
 - Tube wall: 18 gauge (1.2 mm)
- Flange cover: 14 gauge, cover rotates into locked position to conceal flange mount plate and screws
- ADA Compliant

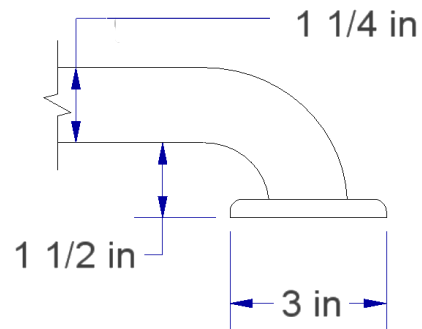

X Length	Y Length	C Length	Product Numbers
16"	32"	26"	BAR-HA1632-TW-125-XX
18"	33"	27"	BAR-HA1833-TW-125-XX
24"	24"	18"	BAR-HA2424-TW-125-XX
27"	36"	30"	BAR-HA2736-TW-125-XX
20"	40"	34"	BAR-HA2040-TW-125-XX
24"	48"	42"	BAR-HA2448-TW-125-XX
30"	30"	24"	BAR-HA3030-TW-125-XX
36"	36"	30"	BAR-HA3636-TW-125-XX
36"	38"	32"	BAR-HA3638-TW-125-XX

IMPORTANT INSTRUCTIONS

SAFETY NOTE: Concealed In-Wall support backing is ALWAYS REQUIRED for this product (not included) – and must be supplied and selected by a licensed installer/contractor to meet both weight bearing and local code requirements. **PRODUCT INSTALLATION SHOULD BE DONE BY A LICENSED INSTALLER/CONTRACTOR.**

CAUTION: Personal injury and/or property damage may result from improper wall support or mounting, which is not covered under warranty.

WARNING: Do NOT use this instruction sheet for grab bars with welded stud or internal threads.

IT IS ESSENTIAL TO MARK THE CENTERLINE DISTANCE BETWEEN THE TWO MOUNTING FLANGE PLATES ON EACH SIDE AS WELL AS THE DISTANCE FROM CENTER OF EACH MOUNTING PLATE TO THE FINISH FLOOR TO ASSURE PROPER ALIGNMENT.

Installation Notes:

1. Bar as Selected
2. Flange Cover Plate
3. Flange
4. Stud
5. Drywall
6. Tile (if applicable)
7. 1/4" (6mm) Diameter Pilot Hole – **TILE PROJECTS ONLY**
8. 1/8" (3mm) Diameter Pilot Hole into Stud
9. 10/24" x 2" Threaded Stainless Steel Hanger Bolt
10. Threaded Stainless Steel Bolt Nut
11. 2" Self-tapping screw

Installation Steps:

1. Locate wall stud or previously installed in wall backing.
2. Use the flange as a template to mark the mounting hole locations. (We recommend using a level to achieve perfect horizontal or vertical mounting.)
3. Drill 1/8" (3mm) diameter pilot hole into stud for each flange.
 - a. If wall is tiled, drill through the tile with a 1/4" (6mm) diameter masonry drill bit.
4. Drive hanger bolts for center post directly into stud using hanger bolt driver leaving 1/4" of thread exposed. (NOTE: Hanger bolts for center post MUST be installed before the end posts are fastened to the wall.)
5. Place Flange over exposed hanger bolts.
6. Screw bolt nut onto hanger bolts until secure.
7. Using the 2" self-tapping screws, fasten each end post to the wall.
8. After all flanges are secured, apply bead of clear sealant around bottom rim of flange cover plate and carefully align the cover plate locking tabs with the slots in the flange.
9. Turn the flange cover plate 15 degrees clockwise to secure.