


## Corner Foot Rest with Textured Center

- Material: 304 stainless steel
- Available Finishes: Satin (SA)  
Polished Chrome (PO)  
Oil Rub Bronze (OB)  
Powder White (PW)  
Matte Black (MB)
- Dimensions:
  - Length: 12"
  - Tube diameter: 1.25" (outside)
  - Tube walls: 18 gauge (1.2 mm)

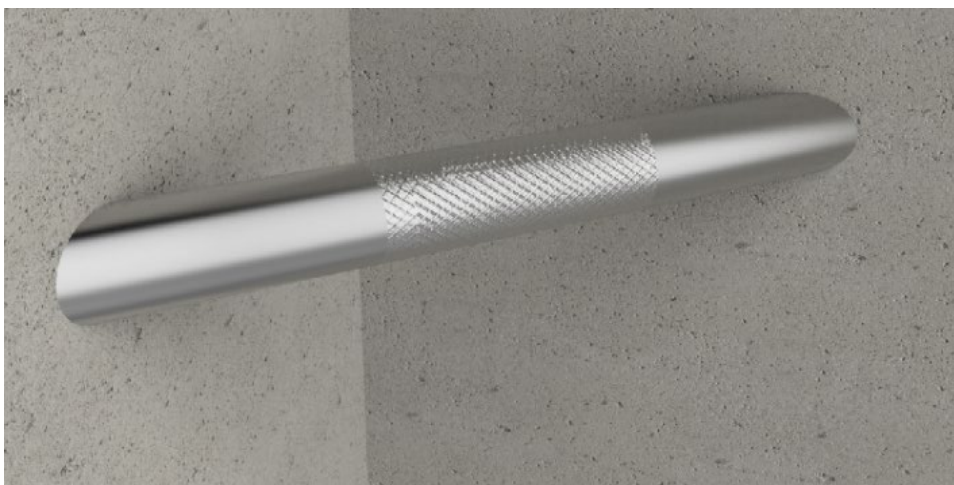

**WARNING: THIS PRODUCT IS NOT INTENDED TO BE USED AS A LOAD BEARING STEP AND SHOULD ONLY BE USED AS A FOOT REST FOR SHOWERING PURPOSES.**

## IMPORTANT INSTRUCTIONS

**SAFETY NOTE:** Concealed In-Wall support backing is ALWAYS SUGGESTED for this product (not included) – and must be supplied and selected by a licensed installer/contractor to meet both weight bearing and local code requirements.

**PRODUCT INSTALLATION SHOULD BE DONE BY A LICENSED INSTALLER/CONTRACTOR.**

**CAUTION:** Personal injury and/or property damage may result from improper wall support or mounting, which is not covered under warranty.

### **INSTALLATION STEPS:**

1. Confirm contents of box: Foot Rest, Support Bracket (2), Set Screws (2) and 4 screws, which are stainless steel with Phillips head.
2. Tools & supplies needed: Phillips screw driver or 3" drill bit extender, pencil, drill, and silicone caulk.
3. Carefully consider the mounting location before installation: Install only where proper structure is provided behind the wall. Measure area of the foot rest and avoid pipes, wires, grout, etc.
4. Position the foot rest in the desired location and mark the ends. NOTE: Foot Rest should be installed with set screws on the bottom of the bar.
5. Install the foot rest support brackets in line with the marking for the foot rest location using the supplied screws.



6. Insert the foot rest onto the installed support brackets and secure using the set screws, tightening using the supplied allen wrench.

